



4081 19" rack-mount kit



Parts supplied in kit;

- 2x small 19" mounting ears
- 1x large 19" mounting ear
- 1x triangular strengthening bracket
- 8x M4x6mm countersunk screws
- 6x M4x8mm round-head screws with shake-proof washers
- 6x M3x6mm countersunk screws



Required tools (not supplied);

- 1x Medium Pozidrive screwdriver



Fitting instructions for one 4081 unit

Please note: the following parts are **not** used in this installation;

- 1x small 19" mounting ear
- 4x M4x6mm countersunk screws



Remove power and all cabling connections from rear of 4081 unit


Fasten the triangular strengthening bracket to the desired side of the 4081 unit using the 6x M4x8mm round-head screws with shake-proof washers



Fasten the large 19" mounting ear to the triangular strengthening plate using the 6x M3x6mm countersunk screws



Fasten 1x small 19" mounting ear to the other side of the 4081 using 4x M4x6mm countersunk screws

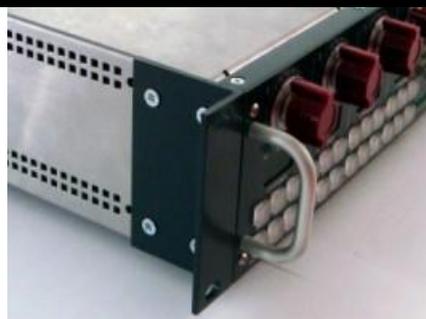

Mount the 4081 unit assembly into a 19" rack using suitable rack-mounting screws and connect all cabling to the rear of the unit. Remove the 4 feet from the bottom of the 4081 unit if required



Fitting instructions for two 4081 units

Fitting instructions for two 4081 units

Please note: the following parts are not used in this installation;


- 1x large 19" mounting ear
- 1x triangular strengthening bracket
- 6x M3x6mm countersunk screws
- 2x M4x8mm round-head screws with shake-proof washers



Remove power and all cabling connections from the rear of the 2x 4081 units

Remove the 7 screws which fasten the lid to the 4081 unit which is to be mounted to the right-hand side and remove the lid


Place the 4081 units side-by-side and use 4x M4x8mm round-head screws with shake-proof washers to fasten the units together

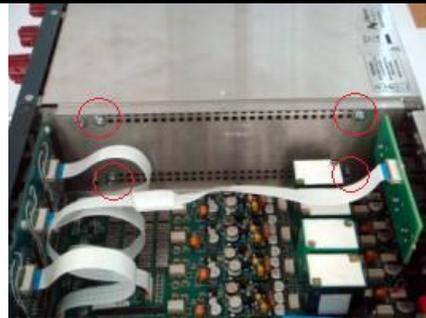

Replace the lid and replace the 7 screws to fasten it in place.

Fasten 1x small 19" mounting ear to the side of one of the 4081 units using 4x M4x6mm countersunk screws

Fasten 1x small 19" mounting ear to the other 4081 unit using 4x M4x6mm countersunk screws

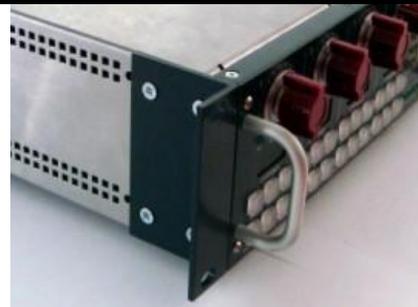

Mount the 2x 4081 unit assembly into a 19" rack using suitable rack-mounting screws and connect all cabling to the rear of the units. Remove the 4 feet from the bottom of the 4081 unit if required

